

## CED Decorative Wiring Accessories

Code	Description
------	-------------



### Sockets

W*SSK2**	2G Switched Socket 13Amp
W*SSK1**	1G Switched Socket 13Amp



### Switches 10Amp

W*S12**	Switch 1 Gang 2 Way
W*S22**	Switch 2 Gang 2 Way
W*S32**	Switch 3 Gang 2 Way
W*S42**	Switch 4 Gang 2 Way
W*SINT**	Intermediate Switch



### Switches 20Amp

W*S20N**	Double Pole 20Amp Switch & Neon
----------	---------------------------------



### Spur Connections

W*SP**	Fused Spur 13Amp
W*SPSN**	Fused Switched Spur 13Amp with Neon



### Cooker Switches 45Amp

W*CS45N**	Cooker Switch 45Amp + Neon
W*CSD45N**	Tall Cooker Switch 45Amp DP + Neon



### Fan Isolator Switch

W*FI3P**	13A Fan Isolator Switch
----------	-------------------------



### Blank Plates

W*BP1	1G Blank Plate
W*BP2	2G Blank Plate



### Dimmers

W*DP400/12	1G 2W PUSH Dimmer
W*DP250/22	2G 2W PUSH Dimmer



### TV Socket

W*TVS1**	TV Socket 1G
----------	--------------



### Telephone & Data Point

W*RJ11/1**	1G RJ11 Telephone Outlet Socket
W*RJ45/1**	1G RJ45 Data Outlet Socket

**\* Include the following suffix to denote the finish required**

**SC = Satin Chrome with white insert**

**C = Polished Chrome with White Insert**

**V = Victorian with White Insert**

**G = Georgian (roped edge) with White Insert**

**BN = Black Nickel with Black Insert**

**\*\* Include the following suffix to denote Black Insert**

**B = Satin Chrome (SC) with black insert**

**B = Polished Chrome (C) with black Insert**